

MUSIC TOUCH SYSTEMS UHF REMOTE CONTROL FUNCTIONS

PLEASE NOTE SOME OF THESE FUNCTIONS ARE NOT AVAILABLE IF REMOTE IS LOCKED.

RANDOM PLAY

TO START RANDOM PLAY ENTER A NUMBER THEN PUSH ENTER.

51 RANDOM PLAY 50S 60S MUSIC
52 RANDOM PLAY 70S MUSIC
53 RANDOM PLAY 80S MUSIC
54 RANDOM PLAY 90S MUSIC
100 RANDOM PLAY ALL MUSIC
101 RANDOM PLAY ALTERNATIVE
102 RANDOM PLAY DANCE
103 RANDOM PLAY DISCO
104 RANDOM PLAY CLASSIC HITS
105 RANDOM PLAY ROCK MUSIC
35 RANDOM PLAY POP MUSIC
40 RANDOM PLAY EASY MUSIC
41 RANDOM PLAY VIDEO MUSIC
42 RANDOM PLAY SLOW BEAT
43 RANDOM PLAY MEDIUM BEAT
45 RANDOM PLAY FAST BEAT

4 TO STOP RANDOM PLAYS

PLAY LISTS

TO START A PLAY LIST ENTER A NUMBER OF THE PLAY LIST THEN PUSH ENTER.

01 START PLAYLIST 1
02 START PLAYLIST 2
03 START PLAYLIST 3
04 START PLAYLIST 4
05 START PLAYLIST 5
051 START PLAYLIST 6
052 START PLAYLIST 7
053 START PLAYLIST 8
054 START PLAYLIST 9

012 RANDOMISE PLAYLIST 1
022 RANDOMISE PLAYLIST 2
032 RANDOMISE PLAYLIST 3
042 RANDOMISE PLAYLIST 4
052 RANDOMISE PLAYLIST 5
510 RANDOMISE PLAYLIST 6
520 RANDOMISE PLAYLIST 7
530 RANDOMISE PLAYLIST 8
540 RANDOMISE PLAYLIST 9

4 TO STOP PLAYLISTS PLAYING

MUSIC TOUCH SYSTEMS UHF REMOTE CONTROL FUNCTIONS

CANCEL SONG

TO CANCEL A SONG PUSH CANCEL BUTTON.

TURN OFF JUKEBOX

TO TURN OFF JUKEBOX PUSH OFF BUTTON.

CREATE A PLAY LIST

TO CREATE A PLAY LIST ENTER 444 THEN THE ENTER BUTTON THEN GO TO JUKEBOX AND FOLLOW ON SCREEN INSTRUCTIONS.

TURN FREE PLAY ON

ENTER 55 THEN THE ENTER BUTTON.

TURN FREE PLAY OFF

ENTER 22 THEN THE ENTER BUTTON.

RANDOM PLAY DELAY

YOU CAN CHANGE HOW OFTEN A RANDOM SONG IS PLAYED.

001 THEN ENTER WILL PLAY A RANDOM SONG EVERY 1 MINUTE

002 THEN ENTER WILL PLAY A RANDOM SONG EVERY 2 MINUTES

AND SO ON, 003,004,005...010 BEING 10 MINUTES. TO DISABLE PUSH 000 AND THEN THE PLAY BUTTON

ADVERTISING SCREEN

244 THEN ENTER BUTTON THIS WILL BRING UP THE ADVERTISING SETUP ON THE JUKEBOX WHERE YOU CAN ADD YOUR OWN CUSTOM ADVERTISING.

PAUSE JUKEBOX

33 THEN ENTER BUTTON WILL PAUSE THE MUSIC AND DISABLES THE TOUCHSCREEN ON THE JUKEBOX – THIS IS GOOD TO USE WHEN YOU HAVE A DJ, BAND OR SPORTS GAME ON – TO CONTINUE THE JUKEBOX PUSH CANCEL, IT WILL SAVE ANY CREDITS IF THEY WERE IN IT WHEN PAUSED.

DISABLE JUKEBOX

34 THEN ENTER BUTTON ALLOWS THE MUSIC TO CONTINUE BUT DISABLES THE TOUCHSCREEN ON THE JUKEBOX – USE THIS IF YOU WANT CONTROL OF THE MUSIC AND NOT ALLOW CUSTOMERS TO CHOOSE – TO CONTINUE NORMAL JUKEBOX FUNCTION PUSH 34 ENTER AGAIN.

KARAOKE MODE

242 THEN ENTER BUTTON TO PUT THE JUKEBOX INTO KARAOKE MODE.

241 THEN ENTER BUTTON THIS WILL PUT THE JUKEBOX BACK TO NORMAL.

243 THEN PLAY BUTTON TO PUT THE JUKEBOX INTO COIN OPERATED KARAOKE MODE.

MUSIC TOUCH SYSTEMS LTD
UHF REMOTE CONTROL MANAGER FUNCTIONS
AND PASSWORDS

The free play and direct select can be disabled on the remote by entering a code

To LOCK THE REMOTE enter 545 then ENTER, this locks out all features except volume control,option33,option34 and cancel song feature.

To UNLOCK THE 545 LOCK OPTION enter your 3 digit password, that you pre selected in password BOX 1 in the jukebox setup screen.

If you want to lock the remote and disable free play turning on, but still allow all other functions then enter 333 then ENTER.

To UNLOCK THE 333 LOCK OPTION enter your 3 digit password, that you pre selected in password BOX 2 in the jukebox setup screen.

NOTE... YOU MUST SELECT A 3 DIGIT PASSWORD NUMBER THAT IS DIFFERENT TO ANY OF THE EXISTING CODES ON OUR REMOTE SHEETS.

To GET TO THE DELETE SCREEN enter 251 then ENTER and then go to the jukebox and follow on screen instructions.

