

MUSIC TOUCH SYSTEMS

ADVERTISING INSTRUCTIONS UPDATE 2.09

First of all if you are wanting to add files you must follow some simple guidelines, for picture adverts the picture file must be a jpeg or bitmap file with a size of 1024 x 768 pixels, this will allow it to display correctly. A video file advert maybe done in avi or mpeg formats. Audio advert files may be done in mp3 or wma formats. Give all your files an identifying name so when you add them you know what they are, very handy for when you come to delete them.

Any files to be added can be transferred via cd disc, usb memory stick or usb removable harddrive.

Once you have your files on your update device, you need to get to the advertising area on the software. This can be done in different ways depending on which type of MTS system you have. The most common way is to touch on the letters (M&H) in the word **Musictouch**, located on the bottom right hand side of the screen in succession. This will bring up the password box if you have not changed the password number to your own then the default number is 689 and push enter.

You are now in the control screen, on the right hand side of the screen is an advertising button, click this to get to the advertising menu screen.

Here you can edit, add and delete text adverts, push the **add new text ads** button, you will notice the cursor flashing in the new box, add what you want to say by using a keyboard or the alphabet on the left hand side of the screen by touch-typing in the desired message. You can also import picture, video or audio advertisements from your update device. To locate these push on either one of the 3 ad buttons available that correspond to which type of ad you are looking for. From the drop down box you can locate your files from your update device drive. If they are **picture ad files** double click them to add them to the advertising box which is in the centre of the screen. All of these adverts, as long as they are the right size will display as full screen adverts. If they are **audio or video ad files** individually double click them to add them, you will see them displayed in the bottom right hand box where you can also set them to come on between audio or video songs at different intervals. If you have more than one ad you can use either of the import all buttons to add them all in one go. You can set times between ads and how long they are displayed, see the on screen menu options to the left and centre of the screen.

When you have added your adverts then exit the program back to windows desktop, by pushing exit program in the control screen. Now reload by double clicking the jukebox player icon on the screen. Repeat the above function one more time and exit the program again to the desktop. The next step we want you to do is run the updatejb program located on the desktop, in here there is a button called backup jukebox database push this and click ok. What we have done here is saved all your information, so if there is a corruption we can get it back up and running by running the restore button in the updatejb program, this process should also be done if altering playlists.